



# Installation instructions for retrofitting a cruise control regulator in the Golf IV TDI/ Golf IV Variant TDI and Bora TDI/ Bora Variant TDI

ET no. 1J0 998 527 A

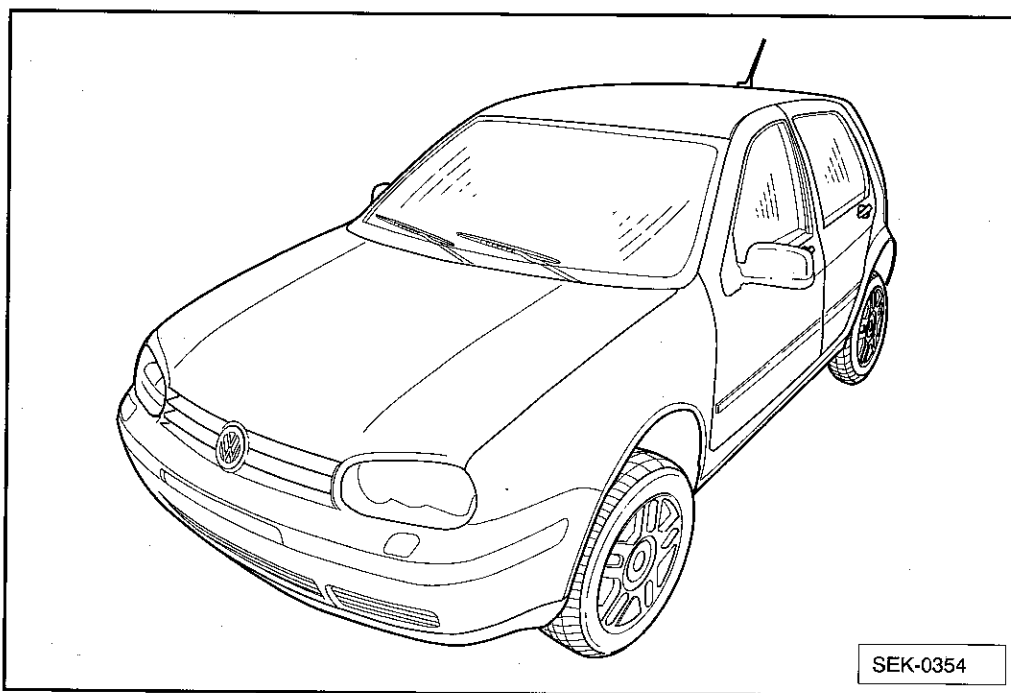

**Note:**

*Due to the safety regulations which apply to the handling of airbag components, this retrofit can only be installed by partner dealerships of Volkswagen AG. Coding in the engine control unit is also required. These activities should be carried out only in a partner dealership of Volkswagen AG.*

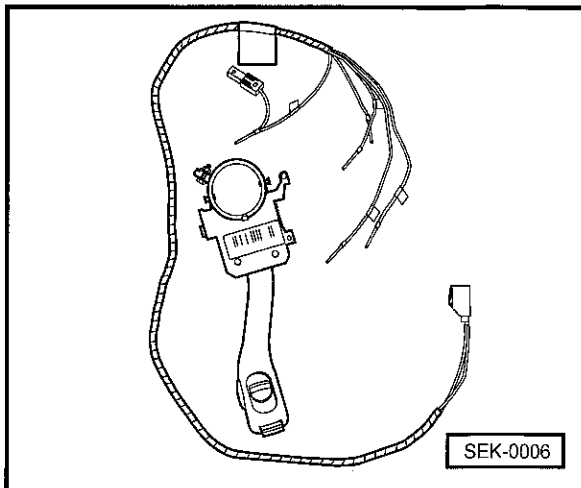

#### **Contents of the service kit:**

- 1 steering column switch  
(directional indicator switch with switch for CCS)
- 1 wiring harness for CCS
- 1 installation description

#### **Special tools, workshop equipment, test and measuring equipment and accessories required**

- Repair Manual, Body Installation Work, Interior.
- Repair Manual, Electrical System.
- Folder Current Flow Diagrams, Electrical Fault Finding and Fitting Locations
- V.A.G 1332 Torque spanner (40 -200 Nm)
- VAS 5051/B Vehicle Diagnostic System, Measurement and Information System, or
- VAS 5052 Vehicle Diagnostic and Service Information System, or
- VAS 5053 Vehicle Diagnostic System
- VAS 1978 Wiring Harness Repair Set

#### **Proceed as follows:**


- First, disconnect the battery ground cable.

#### **Notes:**


- *Please obtain the radio code before disconnecting the battery.*
- *For the following steps, it is essential that you follow the repair manual Body Installation Work, Interior in Chapter 69.*

#### **Important!**

**Work on the airbag system may be carried out only by trained specialists. The relevant safety requirements must be observed, see Safety Notes on the Airbag in the Repair Manual (Chapter 69).**

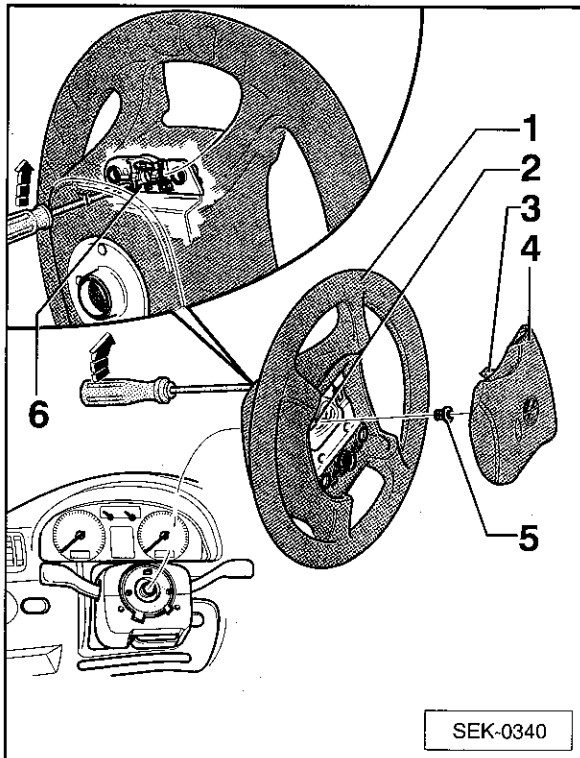


- Release the steering column adjusting mechanism.
- Pull the steering wheel -1- out and push it into the upper position.
- Secure the steering column adjusting mechanism.
- Turn the steering wheel -1- until the spoke of the steering wheel is vertical.
- Insert an approx. 175 mm long screwdriver into the hole in the steering wheel retainer from the rear (insert screwdriver about 45 mm).
- Push the screwdriver upwards **Arrow**. This pushes the securing clamp -6- backwards and releases the snap hook -3- on the airbag -4-.

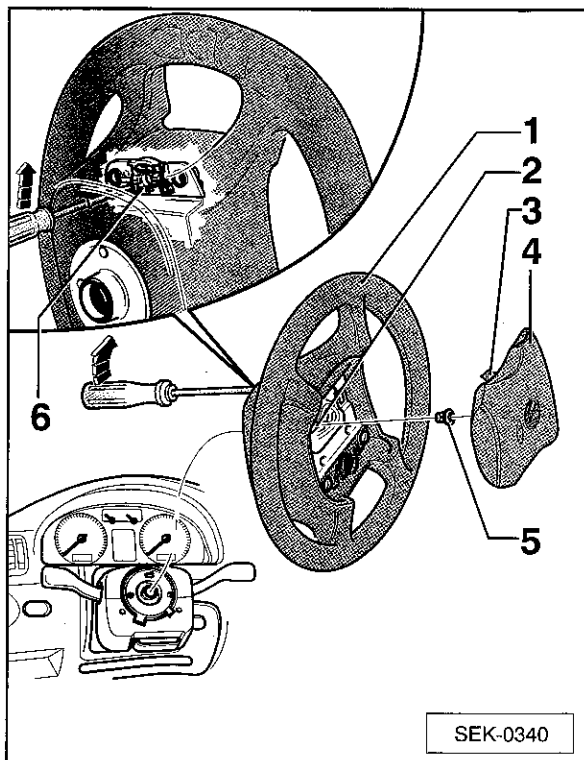


- Use the same procedure to release the hook on the other side.
- Disconnect the plug connection -2- on the airbag -4- and set it aside carefully.
- Turn the steering wheel -1- to the centre position (wheels are pointed straight ahead).
- Remove the attachment screw -5-.
- Pull the steering wheel off of the steering column.

**Notes:**


- The multipoint socket screw is treated with a sealant, and can be used up to five times.
- Make a punch mark after each time it is installed.
- Tightening torque 60 Nm, see repair manual.

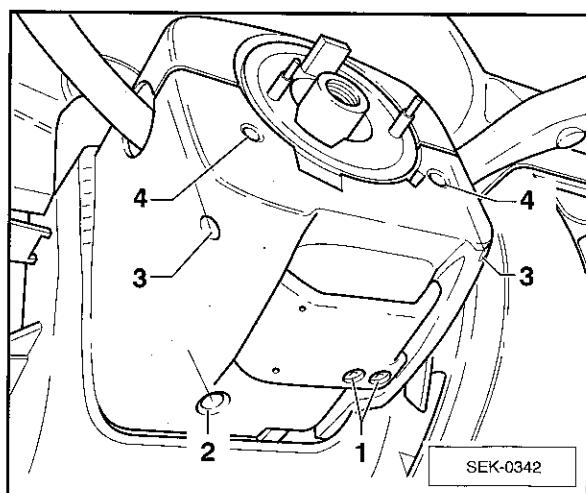

- Remove the attachment screws **-2-, -3- and -4-** on the trim of the steering column switch.
- Remove the attachment screws **-1-** from the handle of the steering column adjusting mechanism.
- Pull off the handle and remove the lower trim for the steering column switch.

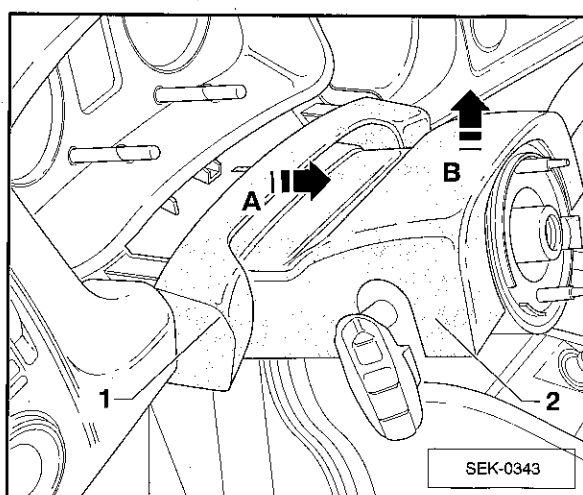

- Pull the upper trim **-1-** in - the **direction of the arrow A-**. Now remove the trim top **-2-** in - the **direction of the arrow B-** from the top.

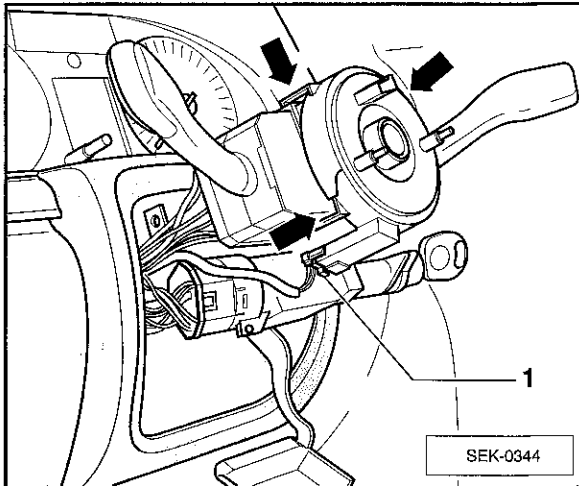


- Disconnect the plug connection -1- to the reset ring with slip ring.

- Release the securing clamps -arrows- on the reset ring with slip ring and pull it off.

**Note:**

*The reset ring with slip ring -F138- must not be rotated out of the centre position (secure with adhesive tape if necessary).*

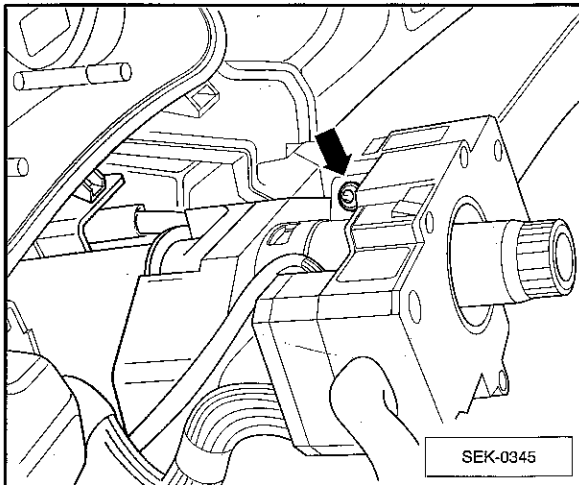


- Slacken the clamping screw for the steering column switch.

- Pull the steering column switch forwards slightly.

- Disconnect all of the plug connections to the steering column switch and remove it.


- Remove the steering column switch.

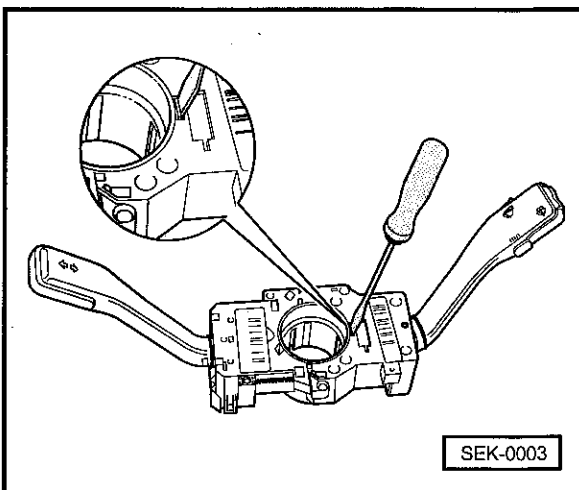


- Release the locking lug on the steering column switch with a screwdriver (see illustration).

- Pull the directional indicator switch off of the windshield wiper switch.


- Replace the directional indicator switch using the directional indicator switch with CCS contained in the service kit.

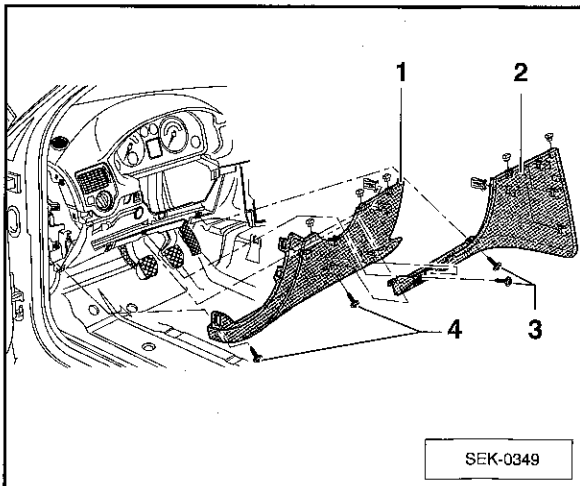


- Unclip the left-hand trim from the fuse holder on the dashboard.
- Remove the attachment screws **-4-**.
- Unclip the left-hand trim **-1-** all the way.
- Remove that attachment screws **-3-** and unclip the right-hand trim **-2-**.
- Reinstall the steering column switch.
- Connect the CCS wiring harness to the directional indicator switch and fasten the wiring harness to the existing cable harness.
- Route the new wiring harness from the directional indicator switch to the central electric system in the footwell.
- Fasten the wiring harness with cable clips.

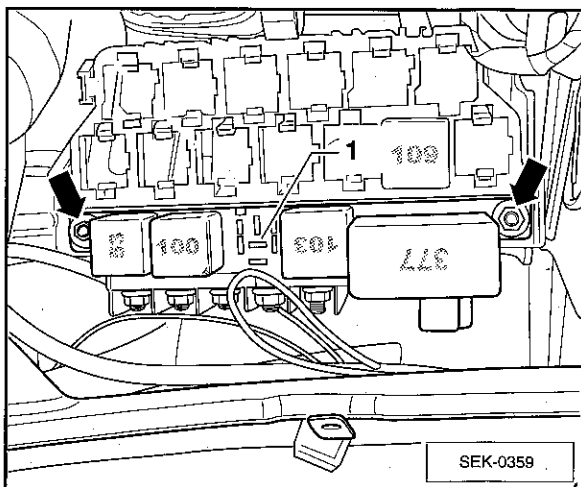


- Release the fixing nuts **-arrows-** and remove the relay board **-1-** together with the relay plate; if necessary also slacken the lower screw connections on the relay board.

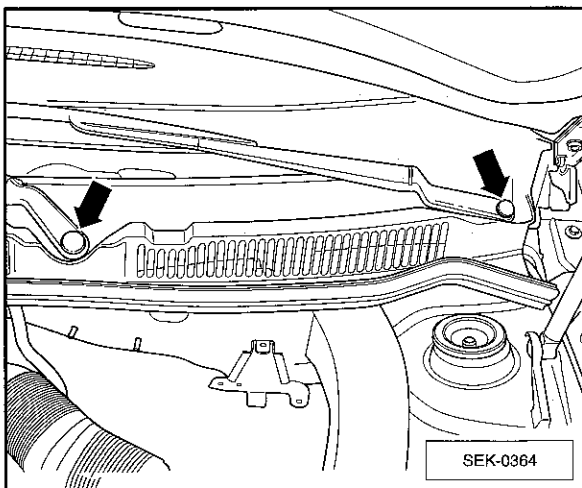


- Lever the caps **-arrows-** off of the wiper rod with a suitable screwdriver.
- Remove the fixing nuts of the wiper arms and remove the wiper arms.

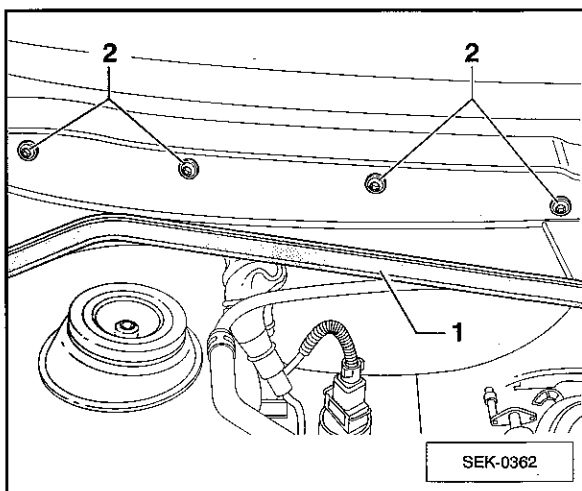


- Pull off the rubber seal **-1-**.
- Remove the attachment screws (for vehicles up to model year 1999) **-2-**, see Repair Manual Electrical Systems.
- Remove the cover from the pollen filter.
- Unclip the trim on both sides from the fender inner.
- Carefully press the cowl upwards and out.

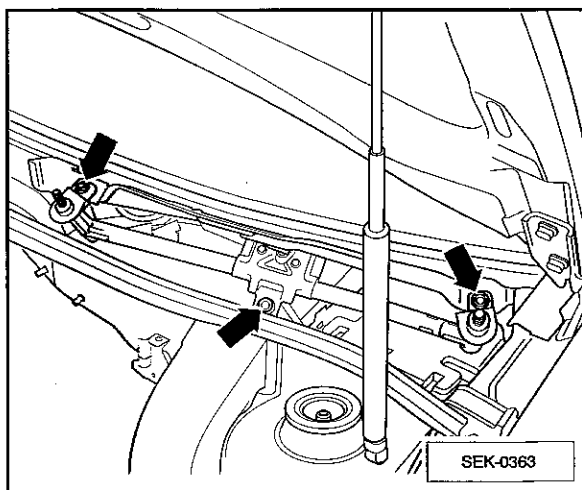


- Disconnect the connecting plug on the wiper motor.
- Remove the attachment screws (M6) **-arrows-** and take off the washers.
- Remove the wiper frame together with the wiper motor.

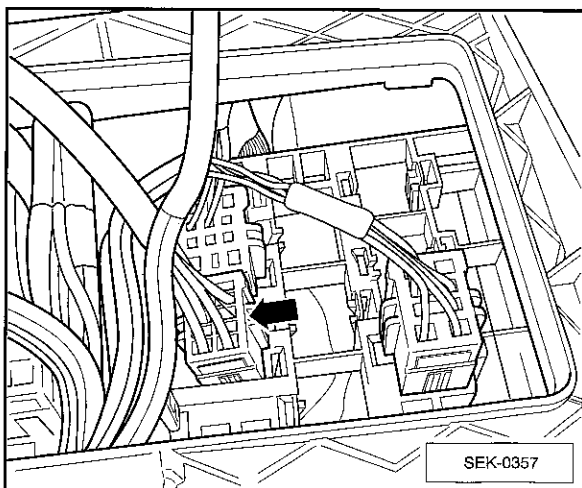


- Remove the cover on the electrical box in the reservoir.
- Separate the black 10-pin connector (T10e) **-arrow-**.

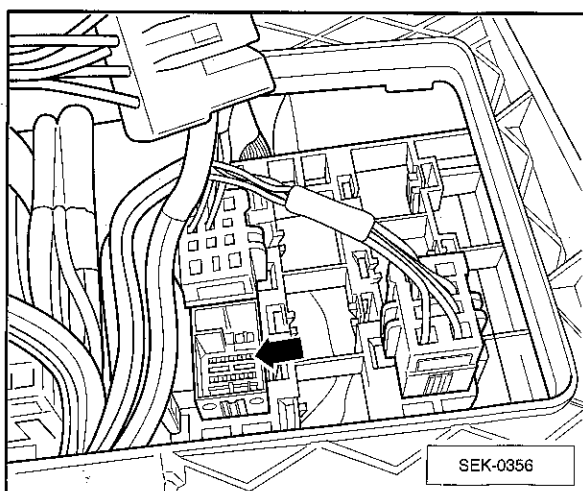

- Release the 10-pin connector **-arrow-** from the mounting.

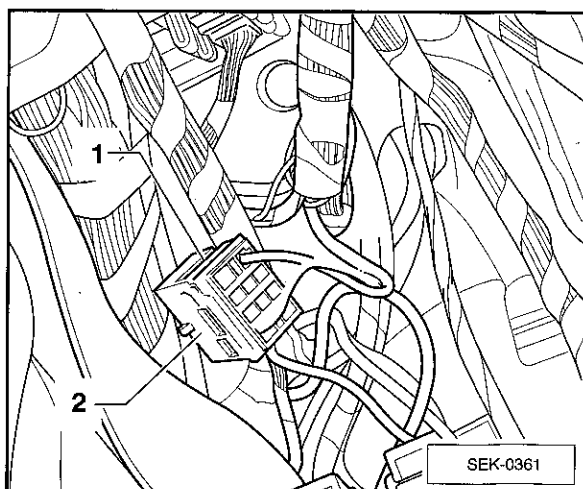

- Pull the 10-pin connector **-2-** into the footwell.
- Release the lock **-1-** from the 10-pin connector **-2-**.

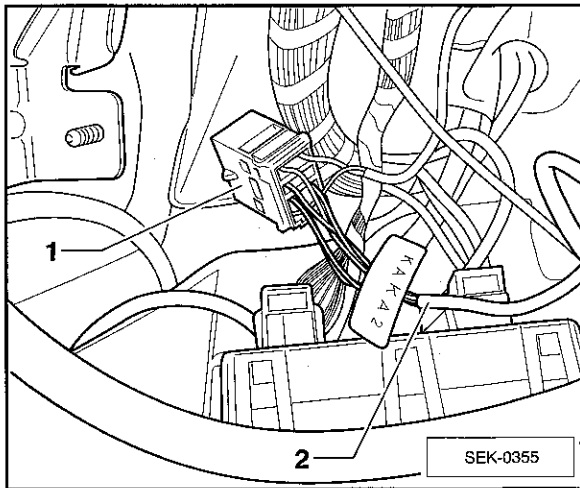


- Insert the individual connecting connecting cables (with labelled tags) of the wiring harness **-2-** into the corresponding chambers of the connector housing **-1-**.

- Refasten the lock on the connector housing.


- Push 10-pin connector into the electrical box until it engages and connect 10-pin mating connector.

- Fit the cover on the electrical box.

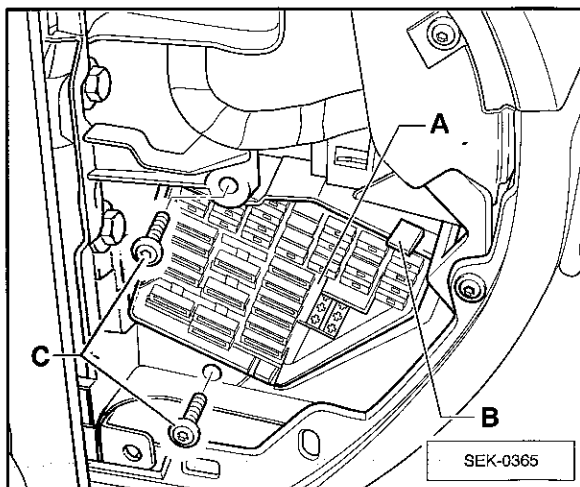

- Remove the attachment screws **-C-** from the fuse holder.


- Press the locking devices **-B-** and pull the fuse holder **-A-** into the footwell.

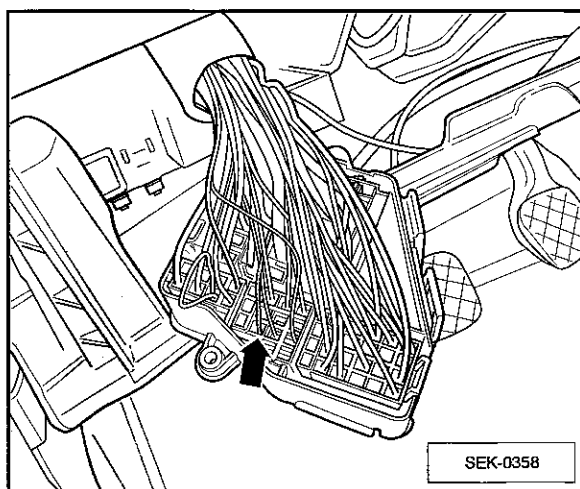

- Pull fuse 5 out of the fuse holder.

- On the rear, release the cable **-arrow-** leading out of fuse chamber 5 using the

- stripping tool VAS 1978/4. Clip the cable into the individual connector housing of the CCS wiring harness.

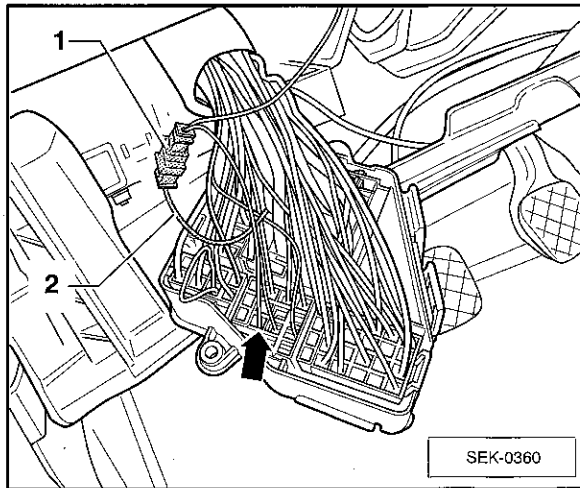


- Connect the short connecting cable (black/blue) **-arrow-** from wiring harness for CSS to fuse chamber 5.
- Clip cable **-2-** together with connector into the connector housing **-1-**.
- Re-insert fuse 5 and install fuse holder.
- Secure loose wiring harnesses with appropriate cable clips.

Further assembly is carried out in reverse sequence. Please observe the following notes:

**Notes:**


- It must be ensured that the distance between the steering wheel and the reset ring is at least 3 mm.
- The markings **-A- and -B-** on the steering column and steering wheel must be in alignment.
- The attachment screw for the steering wheel is treated with a sealant, and can be used up to five times.
- Make a punch mark on the attachment screw after each time it is installed.
- Tightening torque 60 Nm, see repair manual.

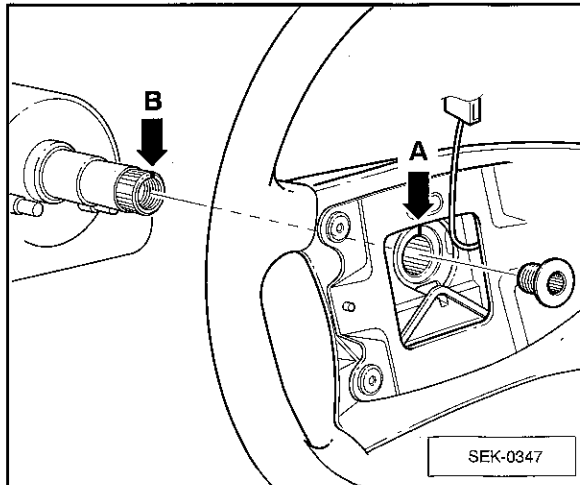

**Important!**


**Before connecting the battery, observe the following safety regulations:**

- There must be no persons in the vehicle
- Switch on ignition
- Close doors
- Connect battery

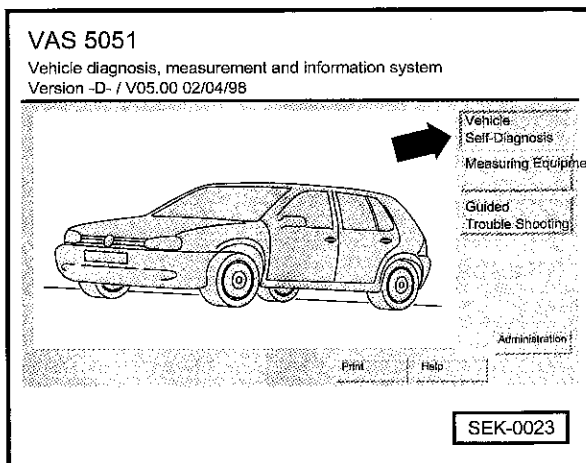


## Activating the cruise control system with VAS 5051:

- Before activating the cruise control system, interrogate the CCS error log.
- Connect tester VAS 5051 to diagnostic connection with cable VAS 5051/3 and switch on tester VAS 5051.
- Press the button for "Vehicle Self-Diagnosis" **-arrow-** on the display.

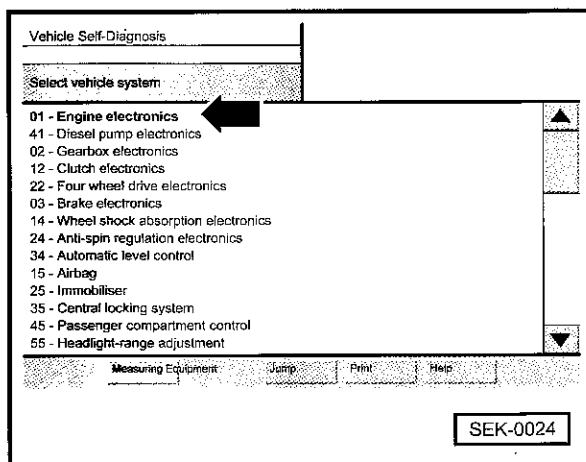

- Press on the display "01 - Engine electronics" **-arrow-**.
- The control unit version and the coding are shown in the upper-right part of the display.
- If "GOOOSG" is displayed, then the cruise control system is activated.
- If "OOOOSG" is displayed, then the cruise control system is not activated.

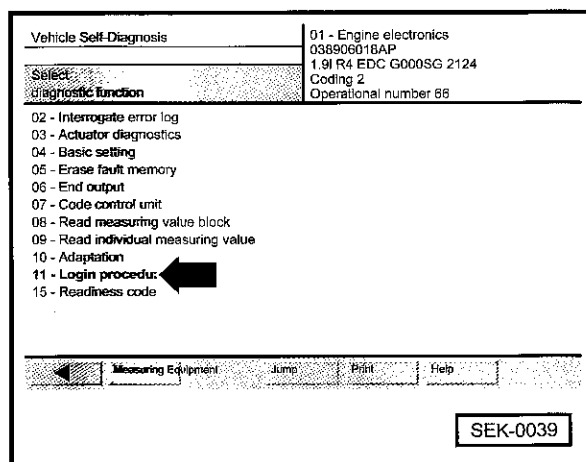

- Press on the display "11 - Login procedure" **-arrow-**.
- Enter the code number **-11463-** using the numeric keypad in order to activate the cruise control system.
- Acknowledge with the "Q" button on the numeric keypad.
- Press on the display "06 - End output".

**Note:**

After the engine control unit has been coded, a test drive must be carried out to check that the CCS is functioning properly (e.g. check that the CCS switches off when the clutch pedal or brake pedal is pressed).